



Руководство по монтажу


HRB, HRE, HFE

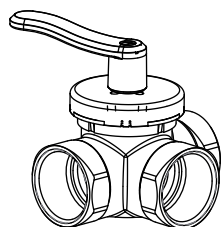


HRB 3, HRB 4 (Dy 15-50)
HRE 3, HRE 4 (Dy 20-50)

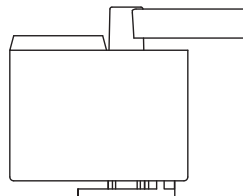






AMB 162/182

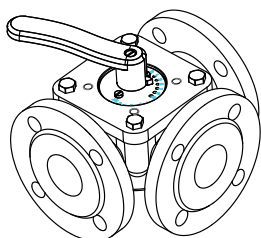

HFE 3 (Dy 20-150)







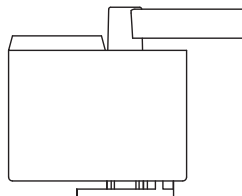


AMB 162/182

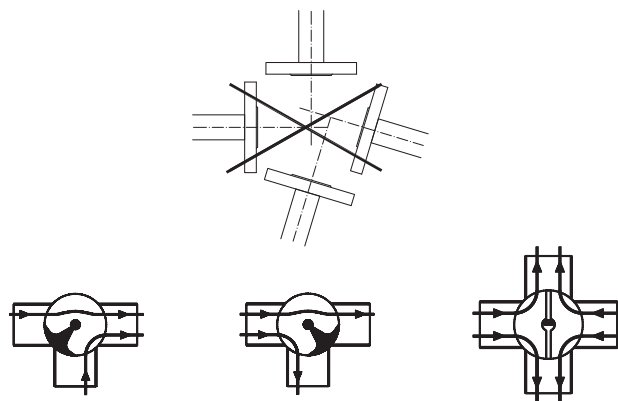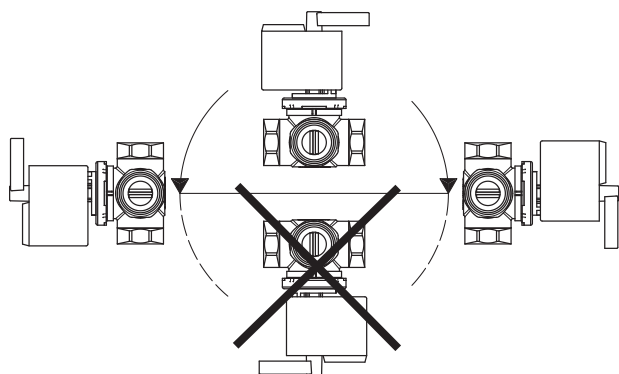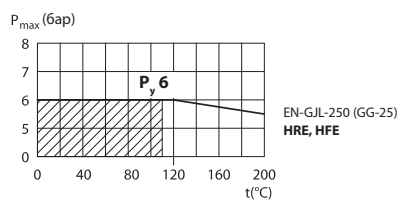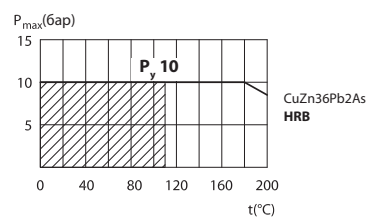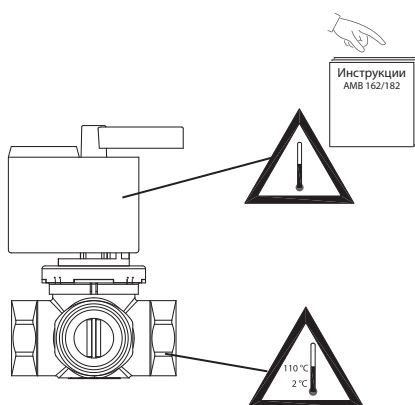


Руководство по монтажу HRB, HRE, HFE

HRB, HRE

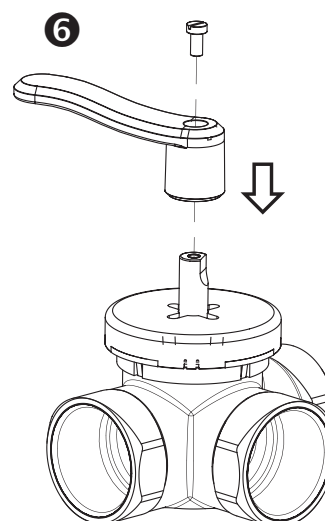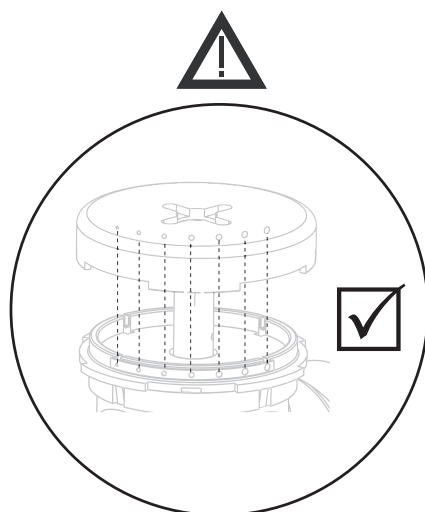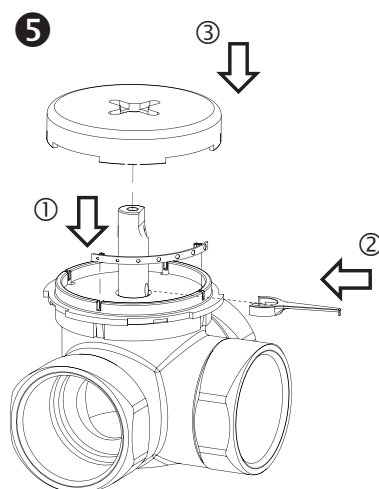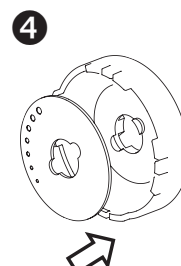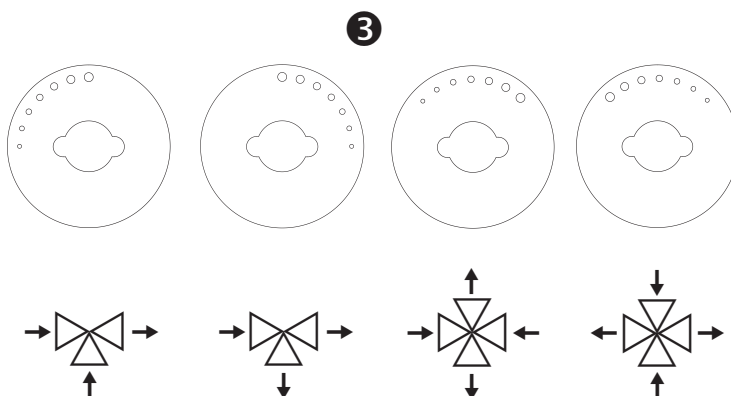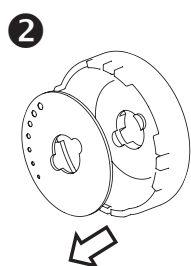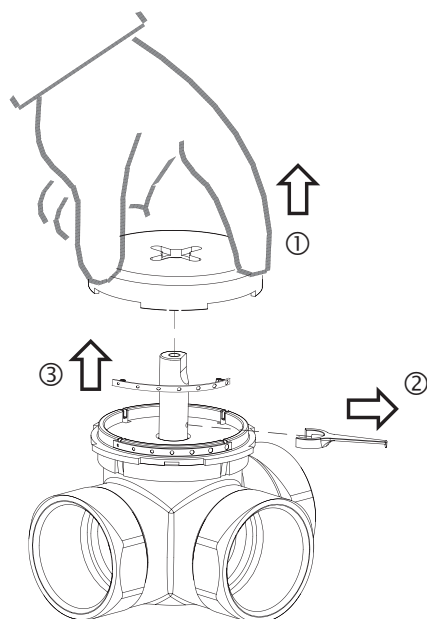


Руководство по монтажу HRB, HRE, HFE

HFE

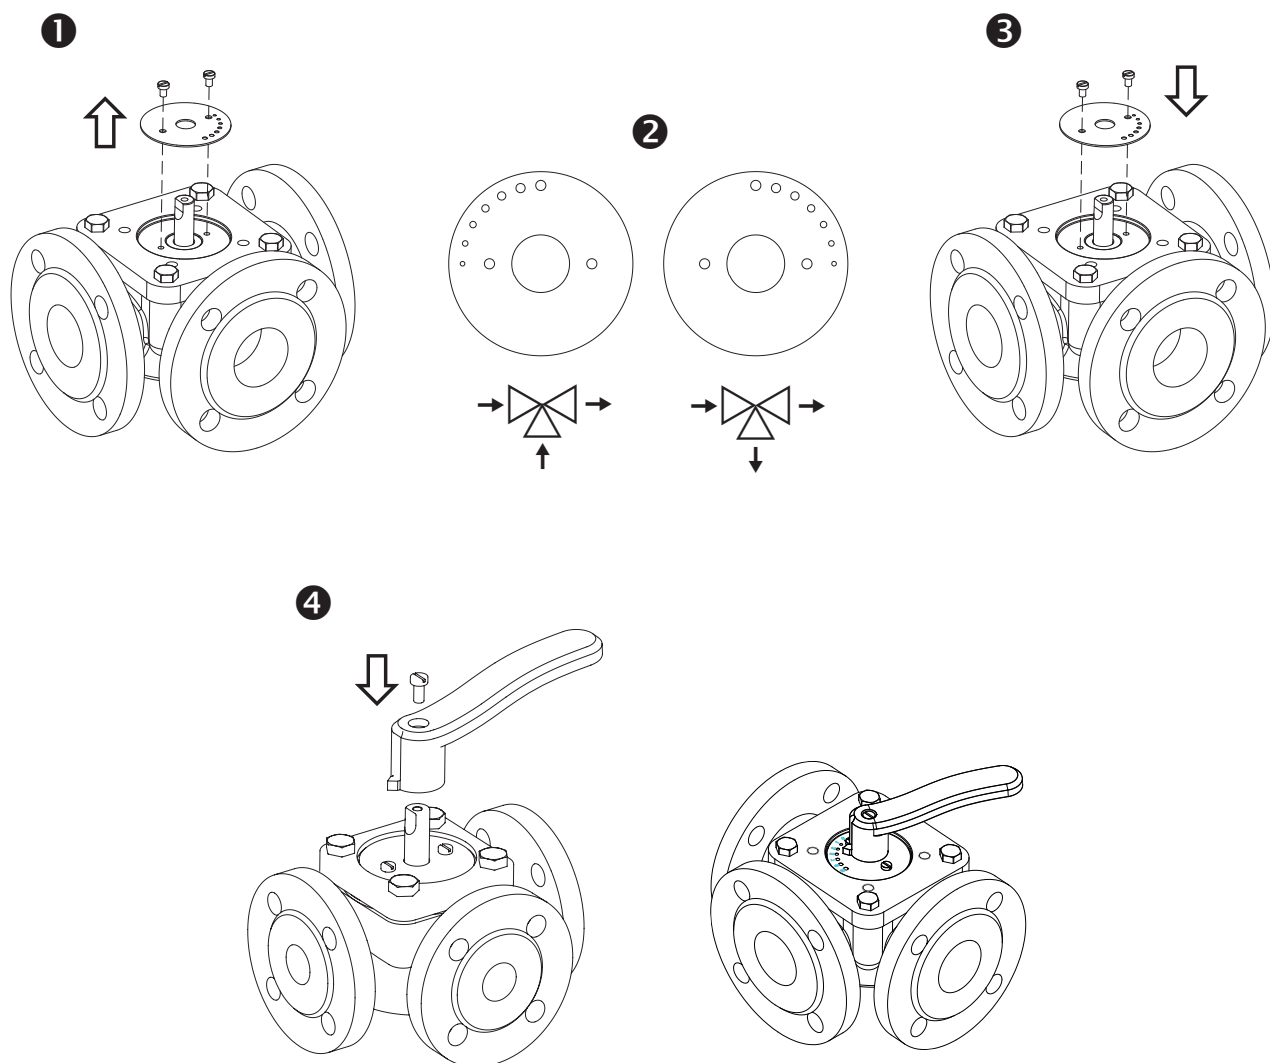


Руководство по монтажу HRB, HRE, HFE

HRB 3, HRE 3

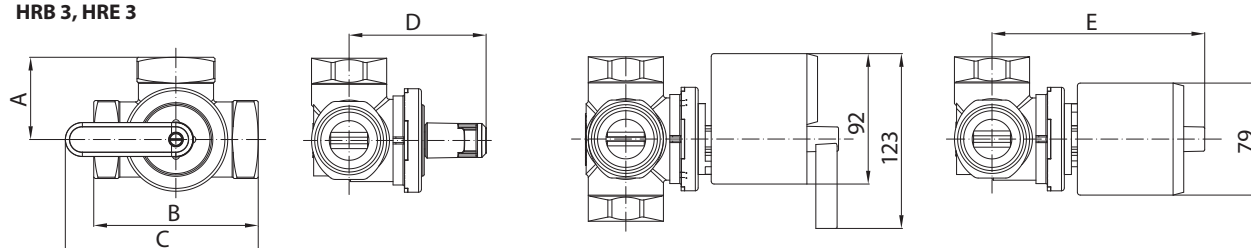

HRB 4, HRE 4

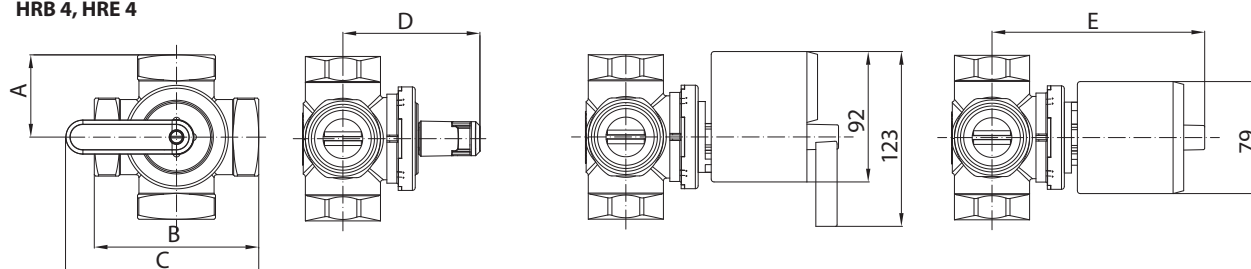


HRB 3, HRB 4

Д _у мм	A	B	C	D	E	Соеди- нение	Электро- привод
	мм						
15	36	72	114	88	143	Rp 1/2"	AMB 162 AMB 182
20	36	72	114	88	143	Rp 3/4"	
25	41	82	119	92	147	Rp 1"	
32	47	94	125	97	152	Rp 1 1/4"	
40	58	116	136	97	152	Rp 1 1/2"	
50	62,5	125	140,5	103	158	Rp 2"	

HRE 3, HRE 4

Д _у мм	A	B	C	D	E	Соеди- нение	Электро- привод
	мм						
20	52.5	105	130.5	88	143	Rp 3/4"	AMB 162 AMB 182
25	54	108	132	92	147	Rp 1"	
32	57.5	115	135.5	102	157	Rp 1 1/4"	
40	60	120	138	102	157	Rp 1 1/2"	
50	78	156	156	108	163	Rp 2"	

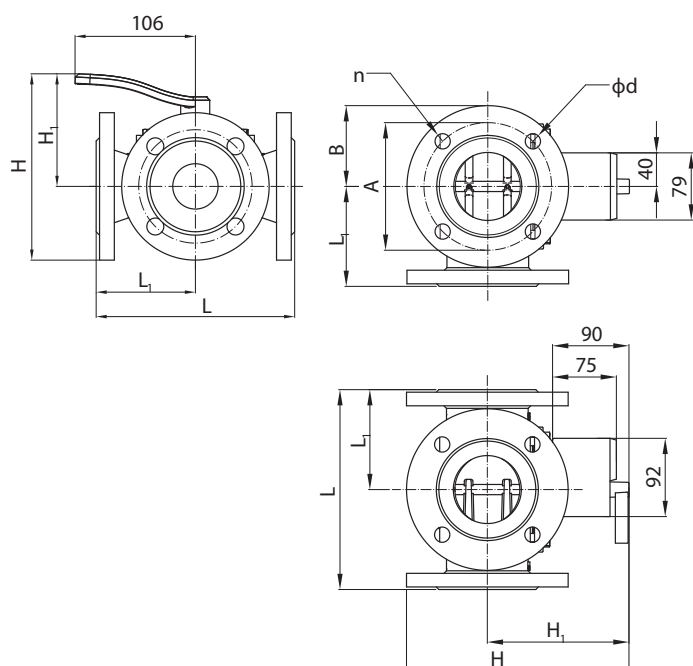

HFE 3

Д _у мм	H	H1	L	L1	B	DC	φd	n	Электро- привод
	мм								
20	131	140	140	70	45	65	11,5	4	AMB 162 AMB 182
25	136	140	150	75	50	75	11,5	4	
32	152	146	160	80	60	90	15	4	
40	157	146	175	88	65	100	15	4	
50	171	155	195	98	70	110	15	4	
65	181	155	200	100	80	130	15	4	
80	208	167	235	118	95	150	18	4	
100	228	177	265	133	105	170	18	4	
125	253	187	300	150	120	200	18	8	
150	271	192	350	175	133	225	18	8	