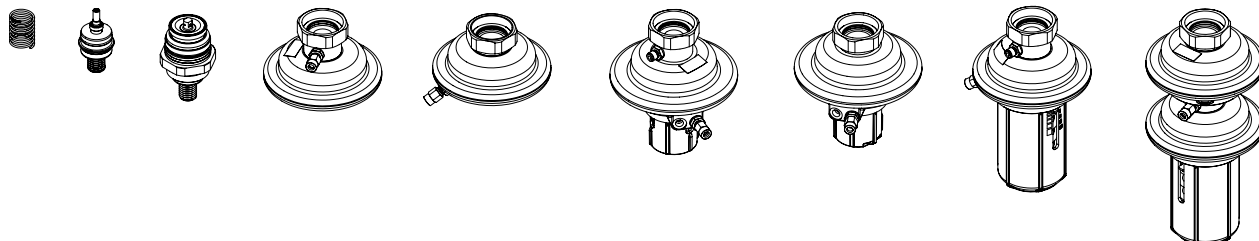 


## Installation Guide

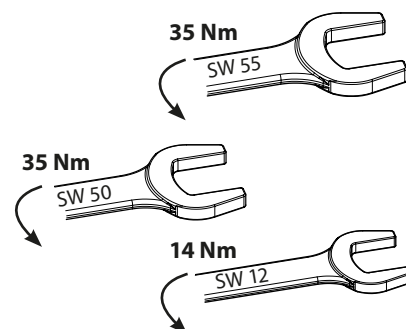 
### Service kits



A	PN	DN	$\Delta p$ (bar)							Code No.
			$0.05 \div 0.5$ $0.1 \div 0.5$	$0.2 \div 1.0$	$0.3 \div 2.0$	$0.8 \div 1.6$	0.2	0.3	0.5	
	16	15 ÷ 32	-	×		-	×	-	-	003H1330
			-	-		-	-	×	-	003H1326
			-	-		-	-	-	×	003H1331
			-	-		×	-	-	-	003H1332
	25	15 ÷ 50		-	-		×		-	88835920
		15 ÷ 25		-	-		-		×	88835930
		32 ÷ 50		-	-		-		×	88835940

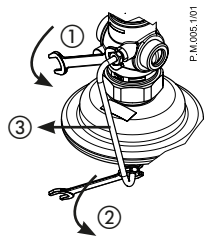 
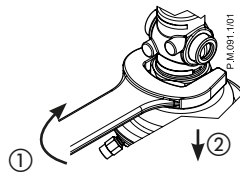 
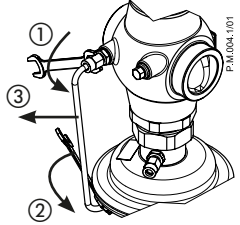 
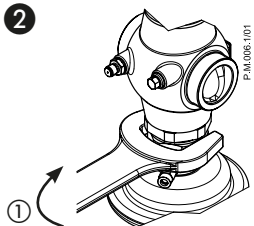 
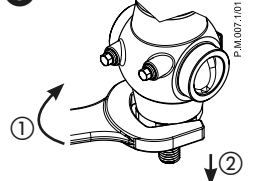 
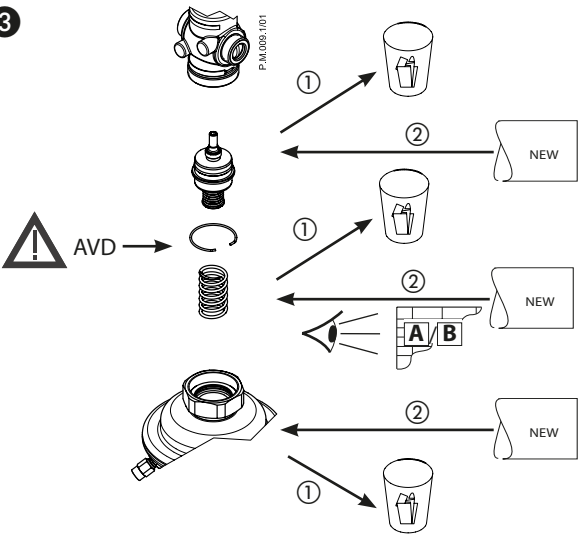 
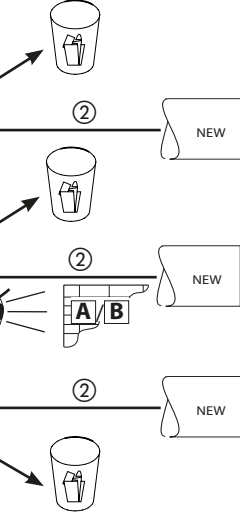 
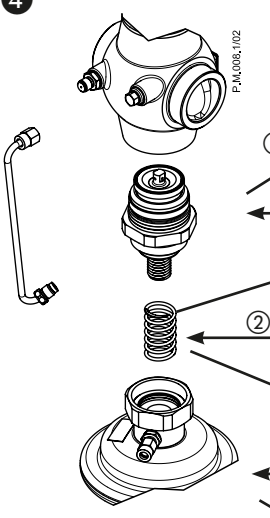 
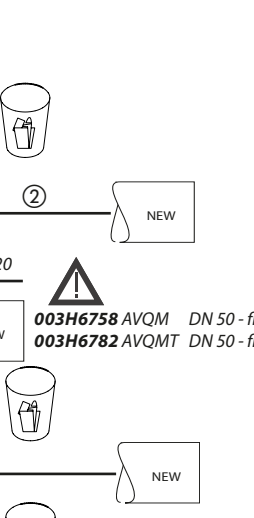 
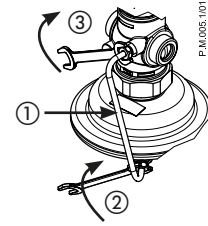 
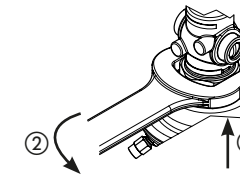 
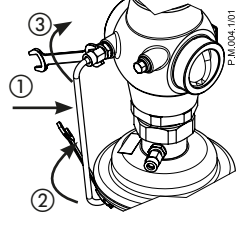 
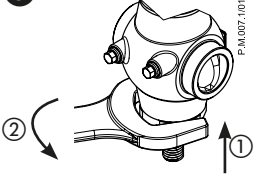 
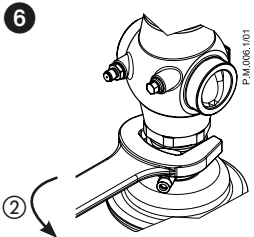 
B	PN	DN	$\Delta p_s$ (bar)							Code No.
			$0.1 \div 0.5$	$0.2 \div 1.0$	$0.3 \div 2.0$	$0.8 \div 1.6$	0.2	0.3	0.5	
	16	15 ÷ 32					×			003H1330
	25	15 ÷ 25					×			88835920
		32 ÷ 50					-			-

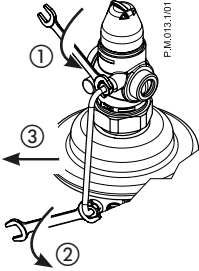 
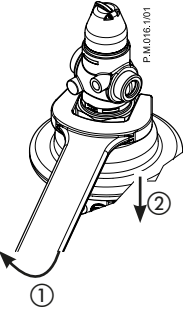 
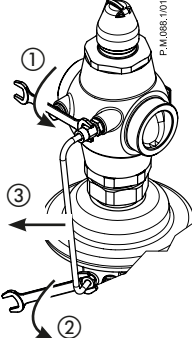 
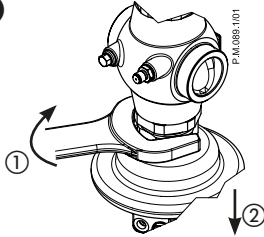 
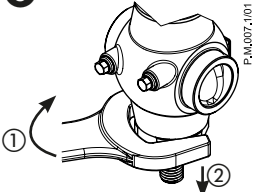 
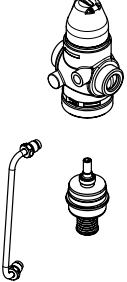 
 

 

 



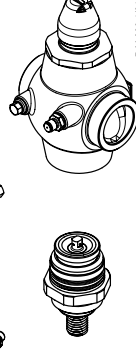 
 

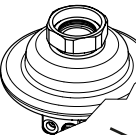 




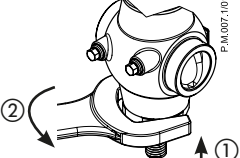 
 
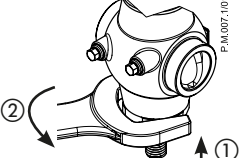 
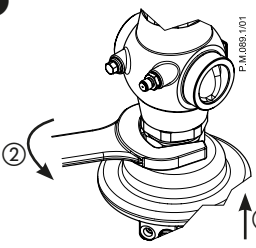 

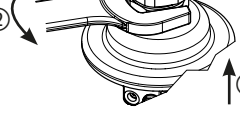 
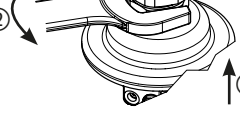 
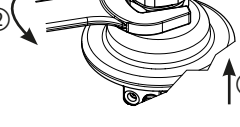 
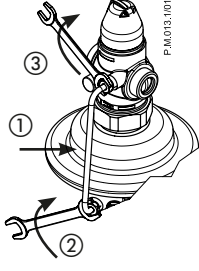 
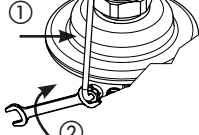 
 
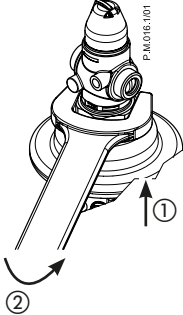 


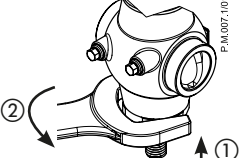 
 

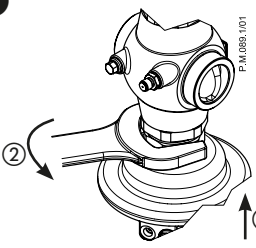 


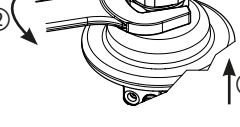 
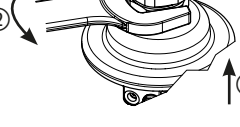 
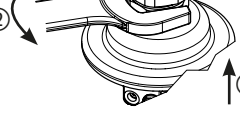 
M1	CuSn5ZnPb (Rg5)
M2	EN-GJS-400-18-LT (GGG 40.3)



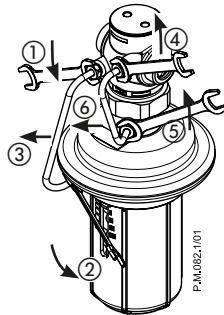 
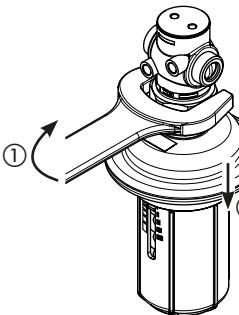 
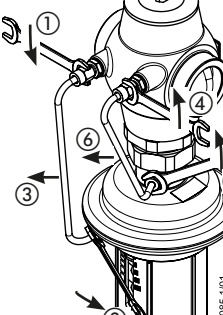 
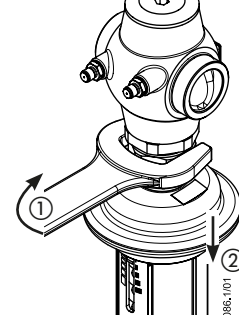 
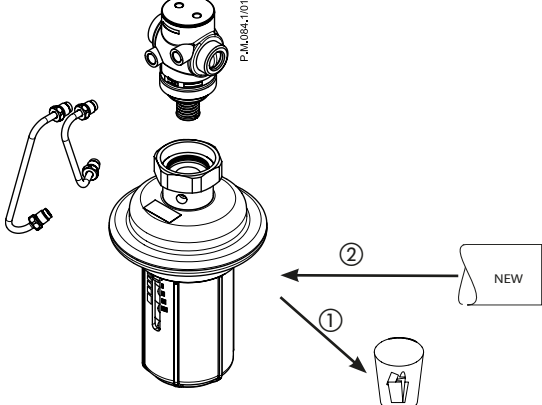 
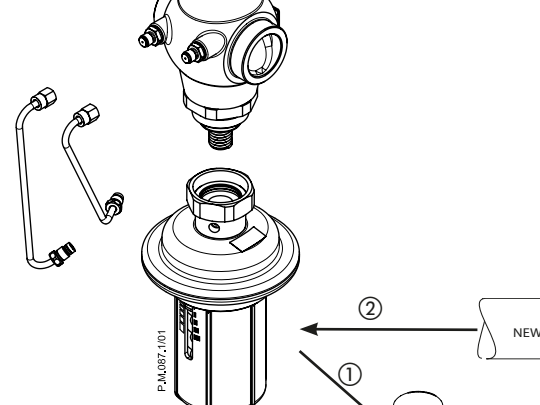 
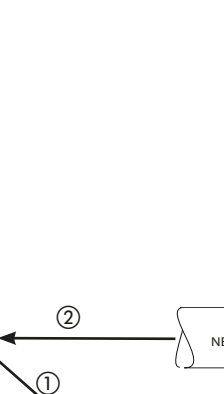 
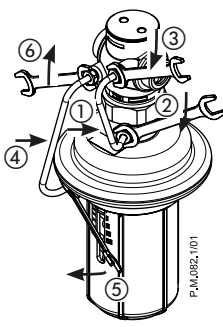 
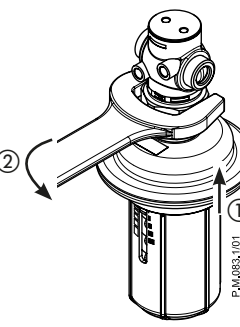 
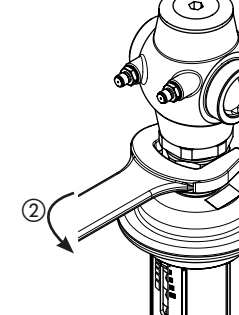 
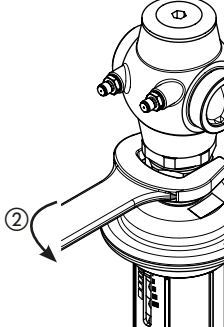 
2	PN 25	AVP, AVP-F, AVPB, AVPB-F, AVPBT-F, AVD, AVQ, AVQT, AVQM, AVQMT	M1
2	PN 25	AVP, AVP-F, AVPB, AVPB-F, AVPBT-F, AVD, AVQ, AVQT, AVQM, AVQMT	M2
3	PN 25	AVPQ, AVPQ-F	M1
3	PN 25	AVPQ, AVPQ-F	M2
4	PN 25	AVPQ 4, AVPQ 4-F	M1
4	PN 25	AVPQ 4, AVPQ 4-F	M2
5	PN 25	AVPA	M1
5	PN 25	AVPA	M2

# Installation Guide      Service kits

PN 25	AVP, AVP-F, AVPB, AVPB-F, AVPBT-F, AVD AVQ, AVQT, AVQM, AVQMT	A B	M1	PN 25	AVP, AVP-F, AVPB, AVPB-F, AVPBT-F, AVD AVQ, AVQT, AVQM, AVQMT	M2
<p><b>1</b></p> 	<p><b>2</b></p> 	<p><b>1</b></p> 	<p><b>2</b></p>  <p><b>3</b></p> 			
<p><b>3</b></p>  <p>AVD →</p>	<p><b>4</b></p> 	<p><b>4</b></p>  <p>88835920</p> <p><b>003H6758 AVQM DN 50 - flange</b> <b>003H6782 AVQMT DN 50 - flange</b></p>	<p><b>5</b></p> 			
<p><b>5</b></p> 	<p><b>4</b></p> 	<p><b>7</b></p> 	<p><b>5</b></p>  <p><b>6</b></p> 			

PN 25 AVPQ, AVPQ-F	B M1	PN 25 AVPQ, AVPQ-F	M2
<p>1</p> 	<p>2</p> 	<p>1</p> 	<p>2</p>  <p>3</p> 
<p>3</p>  <p>1</p>  <p>2</p>  <p>NEW</p> <p>1</p>  <p>2</p>  <p>NEW</p> <p>B</p> <p>1</p>  <p>2</p>  <p>NEW</p> <p>1</p>  <p>2</p>  <p>NEW</p>	<p>4</p>  <p>1</p>  <p>2</p>  <p>NEW</p> <p>1</p>  <p>2</p>  <p>NEW</p> <p>1</p>  <p>2</p>  <p>NEW</p>	<p>7</p>  <p>1</p>  <p>2</p> 	<p>5</p>  <p>2</p>  <p>1</p>  <p>6</p>  <p>2</p>  <p>1</p> 
<p>5</p>  <p>1</p>  <p>2</p> 	<p>4</p>  <p>1</p>  <p>2</p> 	<p>7</p>  <p>1</p>  <p>2</p> 	<p>5</p>  <p>2</p>  <p>1</p>  <p>6</p>  <p>2</p>  <p>1</p> 

District Energy

PN 25	AVPA	M1	PN 25	AVPA	M2
<p>1</p>  <p>PAM082.1/01</p>	<p>2</p>  <p>PAM083.1/01</p>		<p>1</p>  <p>PAM085.1/01</p>	<p>2</p>  <p>PAM086.1/01</p>	
<p>3</p>  <p>PAM084.1/01</p>			<p>3</p>  <p>PAM087.1/01</p>	<p>3</p>  <p>PAM088.1/01</p>	
<p>5</p>  <p>PAM082.1/01</p>	<p>4</p>  <p>PAM083.1/01</p>		<p>5</p>  <p>PAM085.1/01</p>	<p>4</p>  <p>PAM086.1/01</p>	





